



CAFFEMIO

TCM-206

Read this manual thoroughly before using and save it for future reference

WWW.TECNORA.IN

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions carefully.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessories not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. The glass carafe is designed for use with this appliance only. It must never be used on a range top.
13. Do not clean the glass carafe with cleansers, steel wool pads, or other abrasive material.
14. To disconnect, turn the main power switch off, remove plug from wall outlet. Always hold the plug and remove from the wall socket, never pull the cord.
15. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
16. Some parts of appliance are hot when operated, so do not touch with your hands. Use handles or knobs provided only.
17. Never leave an empty carafe on the keeping warm plate otherwise the carafe is liable to crack.
18. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
19. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
20. Do not set a hot container on a hot or cold surface.
20. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY. DO NOT IMMERSE IN ANY LIQUID .FOR HOUSEHOLD USE ONLY.**
22. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
23. Save these instructions.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

Notes on the cord

- a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cords or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

KNOW YOUR COFFEE MAKER



- 1. Open the top cover and fill the water tank with drinking water. The water level should not exceed MAX level as indicated on the water gauge.
- 2. Place the funnel into the funnel support, make sure it is assembled correctly, otherwise the top cover cannot be closed. Place the permanent filter in the funnel.
- 3. Add coffee powder into permanent filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top cover completely.

4. Insert the carafe with handle closed onto keeping warm plate horizontally.
5. Plug the power cord into the outlet.
6. Turn on the mains switch, the indicator will be illuminated red. The appliance will begin working.
7. The brewing process can be interrupted by switching off the appliance anytime, the indicator will stop illuminating. The appliance will continue brewing once the mains switch is pressed again.
Note: You can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.
8. Remove the carafe to serve after about a minute when brewing is completed. Brewing is completed when all the coffee has poured out from the funnel and the water tank is empty.
Note: the quantity of coffee brew will always be less than the quantity of water in the tank due to some amount of water evaporation and also absorption of the water by the coffee grounds.
9. When the process is finished, if you do not want to serve immediately, keep the coffee maker switched on, and the carafe with the coffee brew in its same position (on the keep warm plate). The keep warm plate is an electrically heated plate that keeps the carafe warm. However, for an optimum coffee taste, serve it just after brewing.
10. Always turn the coffee maker off and disconnect the power supply when not use.
Note: The brewed coffee is HOT. Please take care while serving.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot soapy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean the mineral deposits left by the water according to the water quality in your area and the use frequency, we recommend removing mineral deposits as follows:

1. Fill the tank with a solution of water and a commercial to the max level as indicated on water gauge (prepare the solution according to the instructions of the commercial descaler. You may use a solution of citric acid or vinegar instead of a commercial descaler with one part descaling agent to three parts water.
2. place the serving cup under the brew basket.
3. Make ensure funnel are assembled in place.
4. Switch on the appliance and allow it to "brew" the de-scaling solution.
5. After "brewing" about one cup of the solution, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat steps 3 to 5 times or until solution has dripped out and the water tank is completely empty.
8. Rinse by operating the appliance with fresh drinking water at least 3 times.

HINTS FOR GREAT TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing. Order freshly roasted coffee. Order small batches frequently so you always get freshly roasted coffee which has been prepared freshly.
4. Do not reuse coffee powder since this will greatly reduce the coffee' flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

